

HOW TO OPERATE (continued)



TELEVISION

- 1) Use the remote that matches this picture
- 2) Ensure the cable box is turned on. It is on when a white light shines on the front panel. If the light is not on, to activate press the CBL button and then the POWER button on your remote. Alternatively, the cable box can be turned on by pressing the button on the front panel.
- 3) To turn on the TV press the TV button and then the POWER button on your remote.
- 4) To access the on-line TV guide press the CBL button then press the GUIDE button. Use the up down arrow to select the show of your choice then press SELECT/OK.
- 5) Pay for view, purchases or premium channels are not accessible with this TV.

